

## HP LaserJet 4050 Tn

1. Locate the “Menu” button – Press it towards the right until “Information Menu” is displayed.
2. Press the “Item” button to the right until “Print Configuration” is displayed.
3. Press the “Select” button – two pages will print out.
4. On page one, look for the “Printer Information” heading, it should be near the top of the sheet on the left-hand side.
5. About  $\frac{3}{4}$  of the way down under this entry should be a line that reads “Page Count: nnnnnn” where nnnnnn is a number.
6. That number is the one that we need.